

RADIATOR RESERVE TANK

REMOVAL/INSTALLATION


Remove the rear cowl (page 2-2).
Drain the coolant from the reserve tank (page 6-5).

Disconnect the over flow and siphon tubes.
Remove the bolt and radiator reserve tank from the frame.

Installation is in the reverse order of removal.

NOTE:

Route the tubes properly (page 1-19, 1-20).

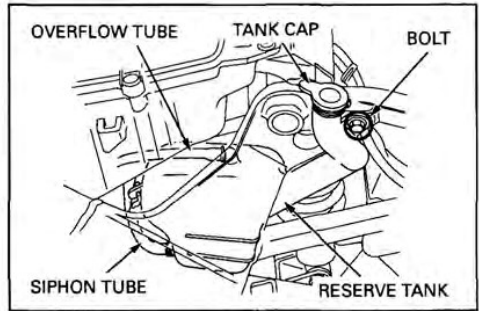

Fill the reserve tank with recommended coolant to the upper level line (page 6-5).

WATER PUMP

MECHANICAL SEAL INSPECTION

Remove the under cowl (page 2-3).

Check the inspection hose for signs of coolant leakage. If there is leakage, the mechanical seal is defective and it should be replaced (page 6-13).


Install the under cowl (page 2-3).



WATER PUMP COVER REMOVAL/INSTALLATION

Drain the coolant (page 6-5).

Remove the three bolts, sealing washer and water pump cover.

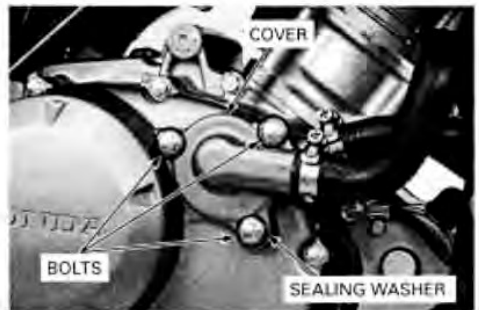

Apply coolant to the new O-ring and install it to the water pump cover.

