


Remove the clutch outer guide and washer from mainshaft.



DISASSEMBLY

Remove the clutch center, washer, judder spring, spring seat, clutch discs and plates.

Remove the pressure plate.

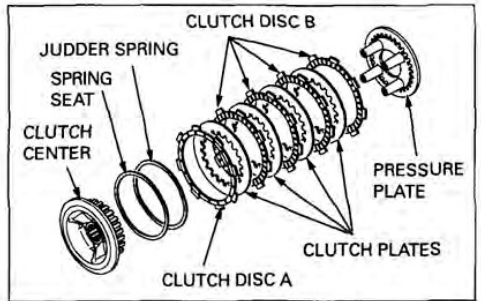

INSPECTION

Clutch lifter bearing

Turn the inner race of the lifter bearing with your finger. The bearing should turn smoothly and freely without excessive play. If necessary, replace the bearing.

LIFTER BEARING

