


ALTERNATOR/STARTER CLUTCH

Remove the flywheel using the special tool.

TOOL:

Rotor puller

07KMC – HE00100

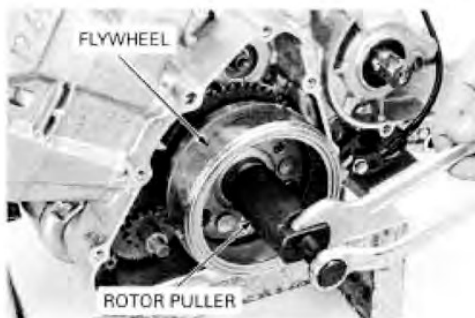

Remove the woodruff key.




STARTER CLUTCH

REMOVAL

Remove the flywheel (page 9-3).

Remove the starter reduction gear.

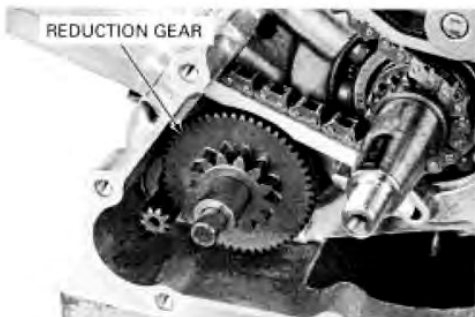

Remove the starter driven gear while turning it counterclockwise.

