

Connect the upper radiator hose to the cylinder head.
Install the radiator and two bolts.
Tighten the bolts.

Install the following:

- right and left middle cowl (page 2-4)
- air cleaner housing (page 5-4)
- fuel tank (page 5-3)

Fill the cooling system with coolant (page 6-5).

