

CYLINDER REMOVAL

Remove the cylinder head (page 10-4).

Loosen the band screw and disconnect the water hose.
Remove the cam chain guide.




Remove the cylinder.

Clean the top of the cylinder thoroughly.

CAUTION:

Avoid damaging the gasket surfaces.

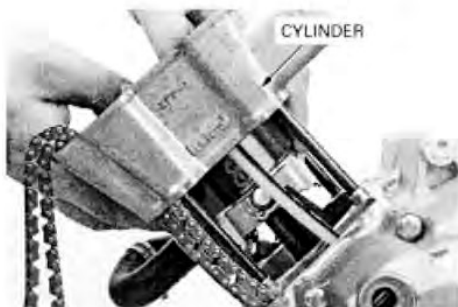

Remove the dowel pins and gasket.

