

**Balancer bearings**

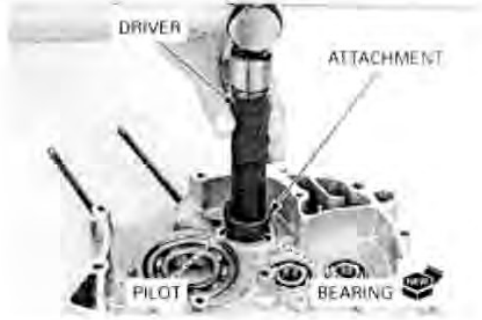
Drive new balancer bearings into the right and left crankcase with following tools:

**TOOLS:****Right crankcase side:**

Driver	07749 - 0010000
Attachment, 37 x 40 mm	07746 - 0010200
Pilot, 12 mm	07746 - 0040200

**Left crankcase side:**

Driver	07749 - 0010000
Attachment, 32 x 35 mm	07746 - 0010100
Pilot, 12 mm	07746 - 0040200

**CRANKSHAFT INSTALLATION**

Engage the balancer and crankshaft aligning the index lines on the balancer driven and drive gears as shown and set the crankshaft and balancer together into the right crankcase.

