


HANDLEBAR

REMOVAL

Disconnect the front brake light switch connectors from the switch.
Remove the bolts, master cylinder holder and master cylinder.

NOTE:

Keep the brake reservoir upright to prevent air from entering the hydraulic system.

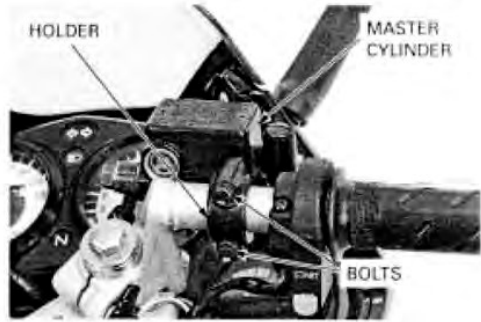

Remove the throttle housing screws.



Remove the throttle upper housing.
Remove the throttle cable from the throttle pipe.



Remove the grip end.
Remove the throttle grip from the handle bar.

