

FRONT WHEEL/SUSPENSION/STEERING

Install the speedometer gear box in the wheel hub aligning the tangs of the retainer with the slots in the speedometer gear box.



INSTALLATION

Position the front wheel between the fork legs and align the stopper of the left fork leg and groove of the speedometer gear box.

Install the front axle from the right side.

CAUTION:


When installing the front wheel, fit the brake disc carefully between the brake pads to avoid damaging the pads.



Install and tighten the axle nut to the specified torque.

TORQUE: 59 N·m (6.0 kgf·m, 43 lbf·ft)

Install and connect the speedometer cable to the speedometer gear box securely.

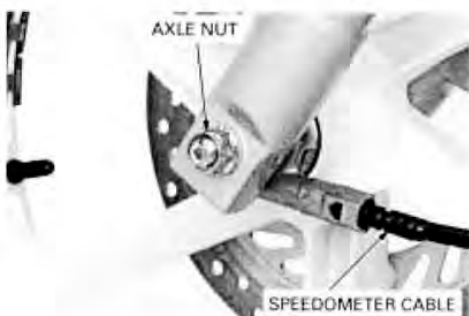

FORK

REMOVAL

Remove the following:

- front wheel (page 14-8)
- front fender (page 2-4)
- handlebars (page 14-3)
- brake caliper (page 16-6)

Loosen the fork bolts, but do not remove it.
Loosen the fork top pinch bolts.

