


FRONT WHEEL/SUSPENSION/STEERING

Remove the dust seal and stopper ring.

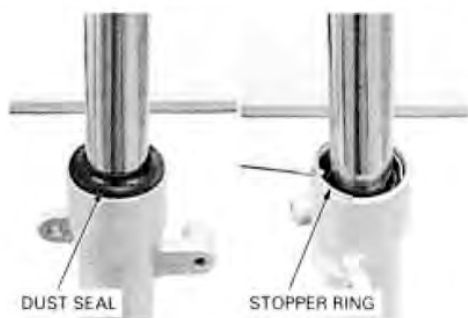

Hold the fork slider in a vise with piece of woods or shop towel.

Remove the fork socket bolt and sealing washer.

NOTE:

If the socket bolt turn together with the fork piston, temporarily install the fork spring and fork bolt.



Remove the fork piston and rebound spring.



Remove the fork pipe and oil lock piece.

