


Install the horn stay.

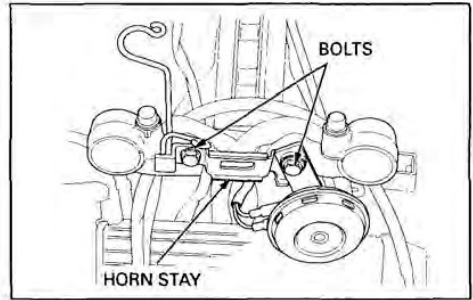

Install the following:

- top bridge
- front fork (page 14-18)
- washer
- stem nut

Tighten the stem nut to the specified torque.

TORQUE: 88 N·m (9 kgf·m, 65 lbf·ft)

Install the following:

- front fender (page 2-3)
- front wheel (page 14-12)
- handlebar (page 14-5)
- upper cowl (page 2-5)



STEERING BEARING PRELOAD

Raise the front wheel off the ground.

Position the steering stem to the straight ahead position. Hook a spring scale to the fork pipe between the fork top and bottom bridges.

Make sure that there is no cable or wire harness interference.

Pull the spring scale keeping the scale at a right angle to the steering stem.

Read the scale at the point where the steering stem just starts to move.

STEERING BEARING PRELOAD:

0.10 – 0.15 kgf (0.220 – 0.330 lbf)

If the readings do not fall within the limits, readjust the steering top thread.

Install the removed parts in the reverse order of removal.

