

BRAKE SYSTEM

Install the new brake pads to the brake caliper.



Install the new O-ring into the pad pin groove.
Apply grease to the pad pin sliding surface.
Push the brake pads against the pad spring, then install the pad pin.

Tighten the pad pin to the specified torque.

TORQUE: 17 N·m (1.7 kgf·m, 12 lbf·ft)



REAR BRAKE PAD REPLACEMENT

▲ WARNING

A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.

NOTE:

- Check the brake fluid level in the reservoir as this operation causes the level to rise.
- Always replace the brake pads in pairs to assure even disc pressure.

Push the caliper pistons all the way in to allow installation of new brake pads.

Remove the rubber plug.

