



Remove the pad pin and brake pads.

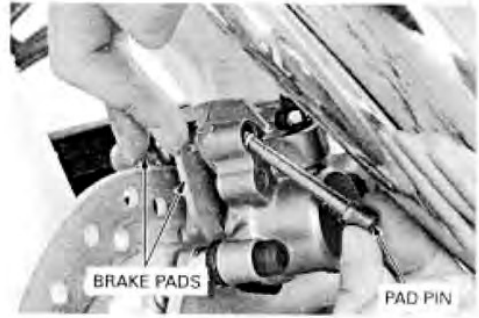

Install the new O-ring into the pad pin groove. Apply grease to the pad pin sliding surface. Push the brake pads against the pad spring, then install the pad pin.

Tighten the pad pin to the specified torque.

TORQUE: 17 N·m (1.7 kgf·m, 12 lbf·ft)

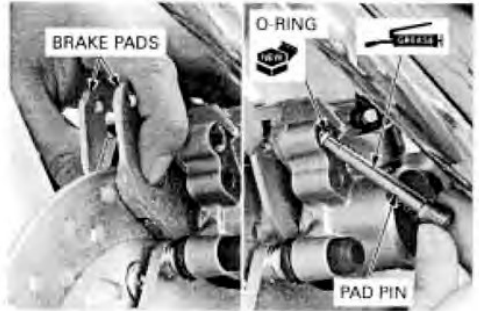

Install the rubber plug.



BRAKE DISC INSPECTION

Visually inspect the brake disc for damage or cracks.

Measure the brake disc thickness with a micrometer.

SERVICE LIMITS:

FRONT: 3.0 mm (0.12 in)

REAR: 3.0 mm (0.12 in)

Replace the brake disc if the smallest measurement is less than the service limit.

