

INSTALLATION


Install the brake pads (page 16-6).
Install the brake caliper and mounting bolts.
Tighten the bolts to the specified torque.

TORQUE: 30 N·m (3.1 kgf·m, 22 lbf·ft)

Connect the brake hose eyelet joint with two new sealing washers, then tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

Fill and bleed the front brake hydraulic system (page 16-3).

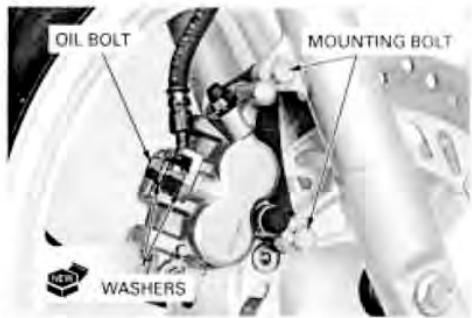

REAR BRAKE CALIPER

REMOVAL

Drain the brake fluid from the rear brake hydraulic system (page 16-3).
Remove the brake pads (page 16-5).

Remove the bolt, sealing washers and brake hose eyelet joint.

Remove the rear wheel (page 15-3).
Remove the brake caliper.



DISASSEMBLY

Remove the brake pad spring from the caliper body.

PAD SPRING



Remove the caliper bracket from the caliper body.
Remove the bracket pin boots.

