

BRAKE SYSTEM

If necessary, lightly apply compressed air to the fluid inlet to get the piston out.

Place the shop rag under the caliper to cushion the piston when it is expelled.
Use the air in short spurts.



▲ WARNING

Do not bring the air nozzle too close to the inlet or the pistons may be forced out with excessive force that could cause injury.

Push the dust seal and piston seal in and lift them out.

CAUTION:

Be careful not to damage the piston sliding surface.

Clean the seal grooves, caliper piston and caliper piston sliding surface with clean brake fluid.



INSPECTION

Check the caliper cylinder and pistons for scoring, scratches or damage.

Measure the caliper cylinder I.D.

SERVICE LIMIT: 32.090 mm (1.2634 in)



Measure the caliper piston O.D.

SERVICE LIMITS: 31.94 mm (1.257 in)

