

INSTALLATION

Apply grease to the pedal pivot sliding surface and install the brake pedal into the right main step holder. Secure the brake pedal with the washer and a new cotter pin.

Install the joint pin and new cotter pin. Install the brake light switch spring to the return spring as shown.

Install the right main step holder and mounting bolts. Tighten the bolts to the specified torque.

TORQUE: 27 N·m (2.8 kgf·m, 20 lbf·ft)

