

STARTER MOTOR

REMOVAL

▲ WARNING

Always turn the ignition switch OFF before servicing the starter motor. The motor could suddenly start, causing serious injury.


Remove the under cowl (page 2-3).

Remove the rubber cap.

Remove the terminal nut and starter motor cable.

Remove the two mounting bolts and ground cable.

Remove the starter motor from the left crankcase.

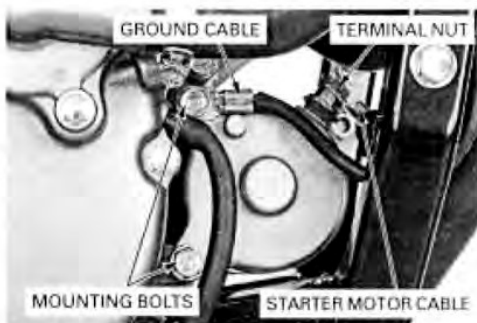

DISASSEMBLY/INSPECTION

Remove the o-ring.

Remove the starter motor case bolts, and O-rings.



Remove the front cover, lock washer and seal ring.



Remove the shims.

