


HANDLEBAR SWITCHES

Remove the fuel tank (page 5-3).

Disconnect the right handlebar switch 3P connector.

Disconnect the left handlebar switch 9P and 2P (Black) connector.

Check for continuity between the wire terminals of the handlebar switch connector.
Continuity should exist between the color coded wire terminals as follows:

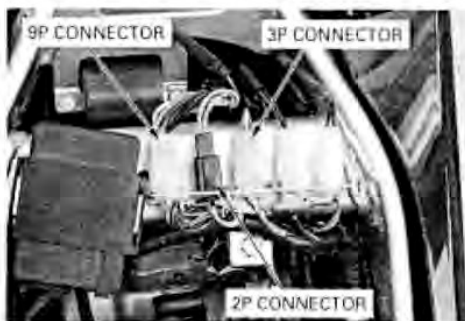

LIGHTING SWITCH

	C1	(HL)	TL
OFF			
(N)			
H	○	○	○
COLOR	Y		Br

DIMMER SWITCH


	(HL)	Lo	Hi
Lo	○	○	
(N)	○	○	○
Hi	○		○
COLOR		W	Bu

TURN SIGNAL SWITCH

	R	WR	L
R	○	○	
N			
L		○	○
COLOR	Lb	Gr	O


HORN SWITCH

	Ho	BAT
FREE		
PUSH	○	○
COLOR	BI	W/G

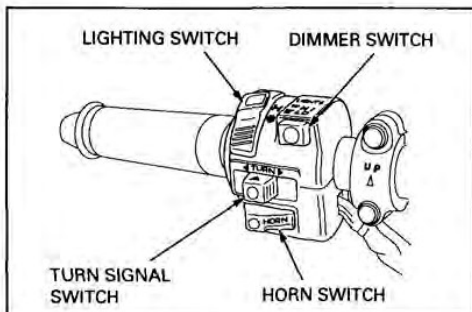

STARTER SWITCH

	ST	BAT
FREE		
PUSH	○	○
COLOR	Y/R	BI

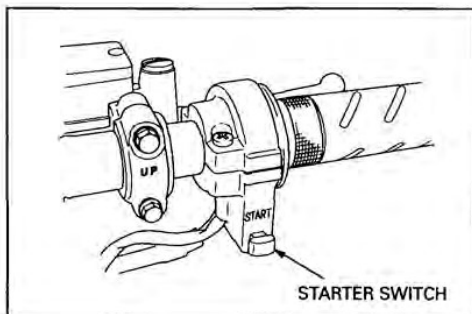

BRAKE LIGHT SWITCH

FRONT

Disconnect the front brake light switch connector and check for continuity between the terminals.

There should be continuity with the brake lever applied, and there should be no continuity with the brake lever is released.

