

REAR

Remove the following:

- driver seat (page 2-2)
- fuel tank (page 5-3)
- rear cowl (page 2-3)


Disconnect the rear brake light switch connector and check for continuity between the terminals.

There should be continuity with the brake pedal applied, and there should be no continuity with the brake pedal is released.

**NEUTRAL INDICATOR/SWITCH****INSPECTION**

Make sure that the neutral indicator come on with the ignition switch ON and neutral position.

If the indicator does not come on, inspect as follows:

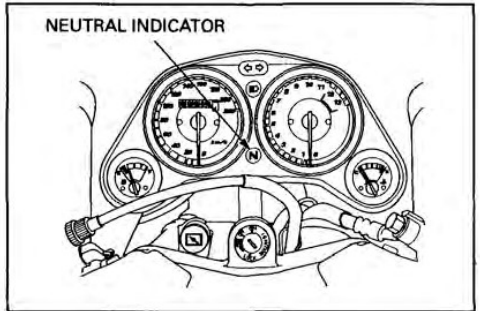

Release the neutral switch connector from the clamp of the frame.

Disconnect the neutral switch connector.



Shift the transmission into neutral and check for continuity between the Light green/Red wire terminal and ground. There should be continuity with the transmission in neutral, and no continuity with the transmission in gear except neutral.

