


### REMOVAL

Disconnect the neutral switch connector (page 20-9).

Remove the drive sprocket cover.

Remove the bolt and neutral switch.

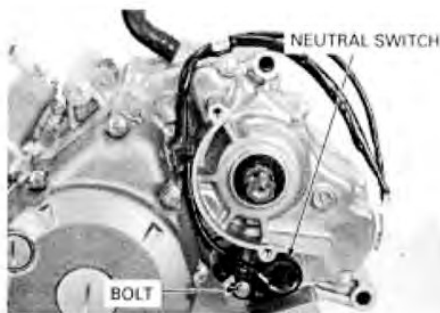


Remove the drive piece and spring.

Check the gear position switch for wear or damage.  
Replace it if necessary.

Check the drive piece for wear or damage.  
Replace it if necessary.

#### CAUTION:

- *Do not bent or tap the drive piece when install the drive piece.*
- *Bent the drive piece by force or crush the contact point will cause poor electricity connection.*

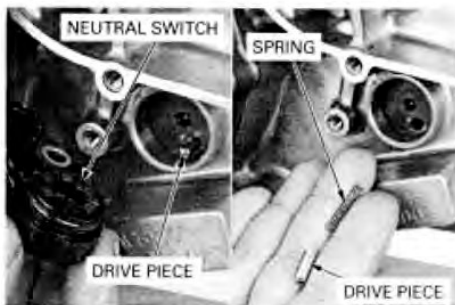


### INSTALLATION

Install the spring and drive piece.

Apply engine oil to the new O-ring and install it into the groove of the neutral switch.

Install the neutral switch to the crankcase.

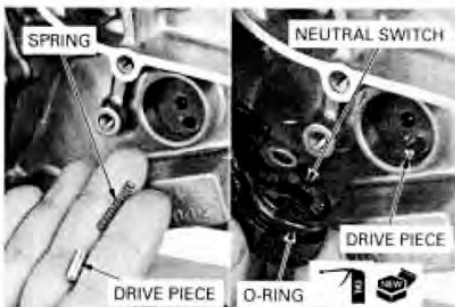

Tighten the bolt securely.

Install the removed parts in the reverse order of removal.

