


Front/Rear Turn Signal Bulb

The right and left turn signal bulbs replacement can be done in the same way.

1. Remove the turn signal lens (1) and the lens packing (2) by removing the screw A (3) and screw B(4).
2. Slightly press the bulb (5) and turn it counterclockwise.
3. Install a new bulb in the reverse order of removal.
 - Use only the amber bulb.

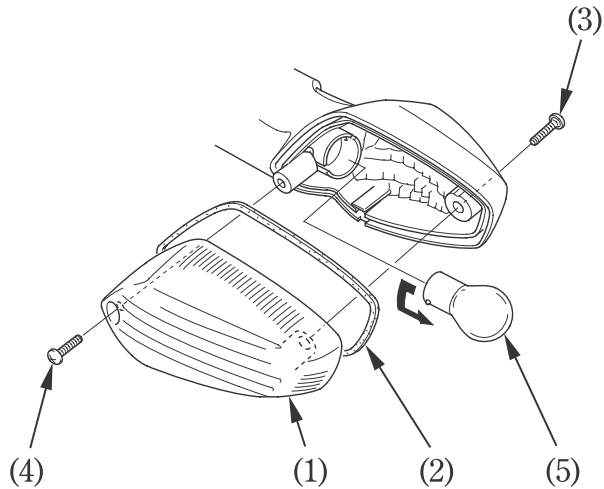

- (1) Lens
(2) Lens packing
(3) Screw A

- (4) Screw B
(5) Bulb