


3 To activate/deactivate of tripmeter A, average fuel mileage and fuel consumption automatic reset mode:

You can also activate or deactivate the automatic reset mode by refuelling after 1st (E) segment of the fuel gauge starts flashing. Deactivation is initially set.

- 1 Press SEL button to select "On" (activate) or "OFF" (deactivate) in the automatic reset mode.

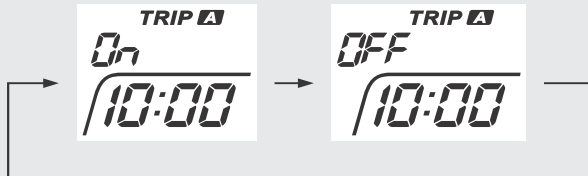

- 2 To end the selection, press SET button. The activation/deactivation of automatic reset mode is set, and then the display moves to the on/off of blinks of HISS indicator (HISS indicator comes on).

continued 27