



## 6 Changing the fuel mileage meter unit:

- 1 Press SEL button to select "km/L" or "L/100 km."

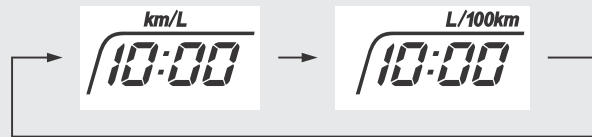

### E, II E type only

If the "mph" for speed and "mile" for mileage are selected, the fuel mileage shown by "mile/L" or "mile/gal."

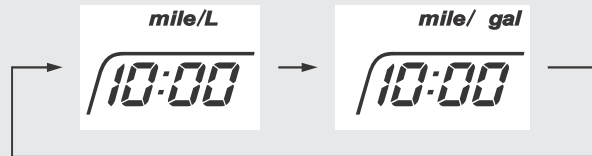

- 2 To end the selection, press SET button.

The established setting can also be set by turning the ignition switch to OFF.

The control is automatically switched from the setting mode to the ordinary display if the button is not pressed for about 30 seconds. Even in this case, established setting is maintained.