


Coolant Temperature Indicator and Malfunction Indicator

The coolant temperature indicator (1) flashes and the red malfunction indicator (2) lights when the coolant is over the specified temperature.

NOTICE

Exceeding maximum running temperature may cause serious engine damage.

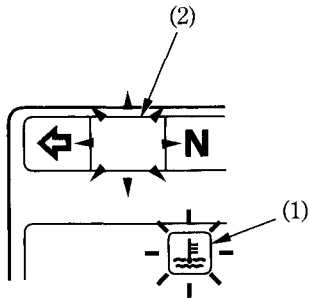

- (1) Coolant temperature indicator
- (2) Malfunction indicator