

### Main Fuse:

The main fuse (1) is located under the seat.

The specified fuse is:

**30 A**

1. Make sure the ignition switch is OFF.
2. Remove the seat (page 55 ).
3. Disconnect the wire connector ( 2 ) of the starter magnetic switch.
4. Pull out the old fuse and install a new fuse.  
The spare fuse (3) is located behind the fuse box.
5. Reconnect the connector and install the seat.


### FI Fuse:

The FI fuse (4) is located under the seat.

The specified fuse is:

**20 A**

1. Make sure the ignition switch is OFF.
2. Remove the seat (page 55 ).
3. Open the FI fuse box cover (5).
4. Pull out the old fuse and install a new fuse.  
The spare fuse is located in the fuse box.
5. Close the FI fuse box cover and install the seat.

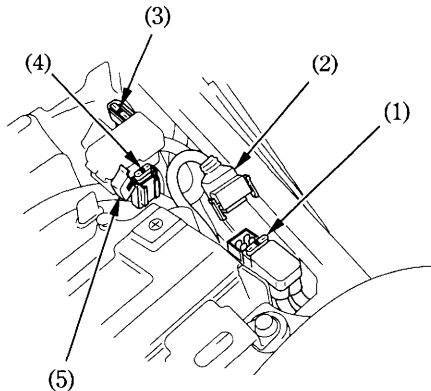

- |                     |                       |
|---------------------|-----------------------|
| (1) Main fuse       | (4) FI fuse           |
| (2) Wire connector  | (5) FI fuse box cover |
| (3) Spare main fuse |                       |