
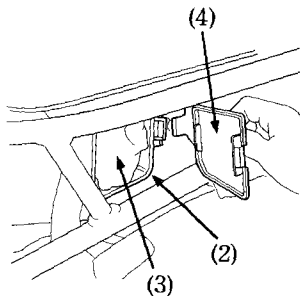


STORAGE COMPARTMENT

The storage compartment (2) is located behind the left side cover near the battery box. The tool kit (3) should be stored in the compartment.

Remove the left side cover (page 38). Insert the ignition key (1) into the groove and pull out the compartment cover (4) while turning the key to the left.

Reinstall the compartment cover by aligning its tabs and pushing it in securely. When washing your motorcycle, be careful not to flood this area with water.

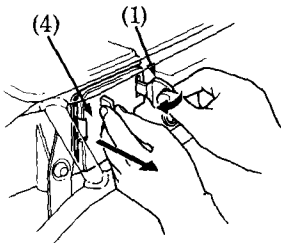

(1) ignition key
(2) Storage
compartment

(3) Tool kit
(4) Compartment
cover