

ITEM	FREQUENCY	WHICHEVER →		ODOMETER READING [NOTE (1)]							
		COMES FIRST ↓	x 1,000 km	1	6	12	18	24	30	36	
			x 1,000 mi	0.6	4	8	12	16	20	24	
NOTE	MONTH		6	12	18	24	30	36	Refer to		
DRIVE CHAIN			I, L EVERY 600mi (1,000km)								Pages 71-75
DRIVE CHAIN SLIDER					I			I		I	Page 76
BRAKE FLUID	NOTE (3)			I	I	R	I	I	R	Pages 16-19	
BRAKE PAD WEAR				I	I	I	I	I	I	Page 86	
BRAKE SYSTEM			I		I		I		I	Pages 16-19	
* BRAKE LIGHT SWITCH							I		I	-	
* HEADLIGHT AIM							I		I	-	
CLUTCH SYSTEM			I	I	I	I	I	I	I	Pages 20-21	
SIDE STAND							I		I	Page 78	
* SUSPENSION							I		I	Page 77	
* NUTS, BOLTS, FASTENERS			I		I		I		I	-	
** WHEELS/TYRES							I		I	-	
** STEERING HEAD BEARINGS			I		I		I		I	-	

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

NOTES: (1) At higher odometer readings, repeat at the frequency interval established here.

(2) Service more frequently when riding in unusually wet or dusty areas.

(3) Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.

(4) Switzerland and Austria type only.