



4. Loosen the right and left axle pinch bolts (5), and remove the axle bolt (7).
5. Withdraw the front axle (6) and remove the front wheel.

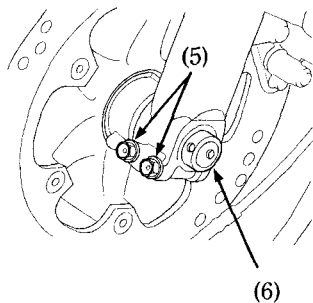

- (5) Axle pinch bolts
(6) Front axle

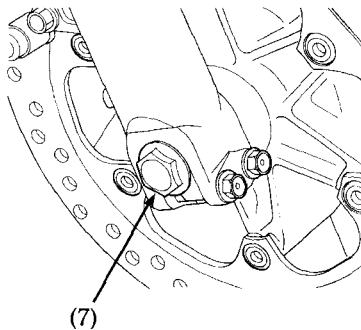

- (7) Axle bolt