


Stop/Taillight Bulb

1. Remove both side covers (page 40) and seat (page 43).
2. Remove the two tail cowl mounting bolts (1) and the mounting rubbers (2).
3. Remove the tail cowl (3) by carefully prying up on the retaining tab (4).

4. Turn the socket (5) 90° counterclockwise, and remove it.
5. Slightly press down on the bulb (6) and turn it counterclockwise.
6. Install a new bulb in the reverse order of removal.

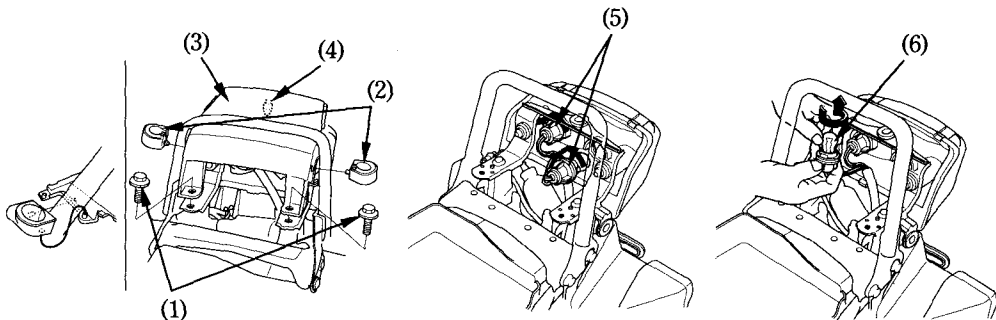

- (1) Mounting bolts
(2) Mounting rubber

- (3) Tail cowl
(4) Tab

- (5) Socket

- (6) Bulb