

<b>(Ref. No.) Description</b>	<b>Function</b>
(9) Neutral indicator (green)	Lights when the transmission is in neutral.
(10) Low oil pressure indicator (red)	<p>Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p><b>CAUTION:</b></p> <p><b>* Running the engine with insufficient oil pressure may cause serious engine damage.</b></p>
(11) High beam indicator (blue)	Lights when the headlight is on high beam.
(12) Tripmeter	Shows mileage per trip.
(13) Tripmeter reset knob	Resets tripmeter to zero ( 0 ) by pushing the knob.