


FRONT COWL

The right and left front cowls can be removed in the same manner.

Removal:

1. Remove the clips (1).
2. Remove the screws (2).
3. Remove the bolts A (3).

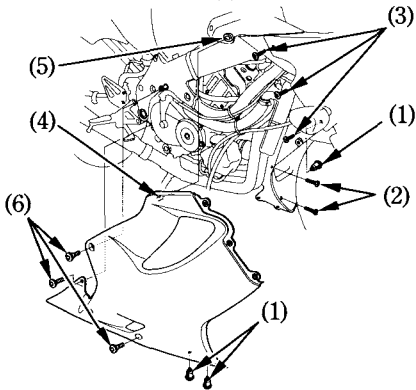


(1) Clips

(2) Screws

4. Pull out the hooks (4) from the grommets (5).
5. Remove the bolts B (6).

Installation:

- Installation can be done in the reverse order of removal.

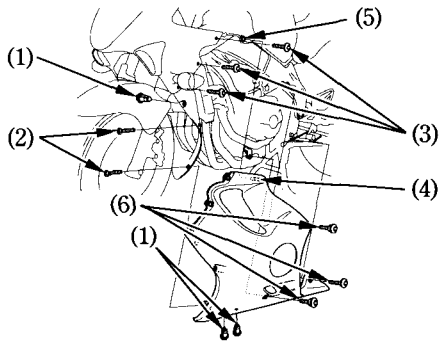

(3) Bolts A

(5) Grommets

(4) Hooks

(6) Bolts B