 


(Ref.No.) Description	Function
(1) Fuel gauge and coolant temperature display	Show approximate fuel supply available (page 20) and coolant temperature (page 22). This display shows the initial display (page 18).
(2) Left turn signal indicator (green)	Flashes when the left turn signal operates. Should light for a few seconds and then go off when the ignition switch is turned ON.
(3) Immobilizer system (HISS) indicator (red)	Except MX type: This indicator lights for a few seconds when the ignition switch is turned ON and the engine stop switch is at  (RUN). It will then go off if the properly-coded key has been inserted. If an improperly-coded key has been inserted, the indicator will remain on and the engine will not start (page 56). When the blinking function of this indicator is valid and the ignition switch is OFF, it keeps blinking for 24 hours (page 57).