

<b>(Ref.No.) Description</b>	<b>Function</b>
(4) Neutral indicator (green)	Lights when the transmission is in neutral. Should also light for a few seconds and then go off when the ignition switch is turned ON.
(5) Tachometer	Shows engine revolutions per minute. The tachometer needle will swing to the maximum scale on the dial once when the ignition switch is turned ON.
(6) Tachometer red zone	<p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <p><b>NOTICE</b></p> <p>Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.</p>
(7) Tachometer red zone indicator (yellow)	Flashes when the tachometer needle enters the red zone. Should light for a few seconds and then go off when the ignition switch is turned ON.