


1. To drain the oil, remove the oil filler cap, crankcase drain plug (1) and sealing washer (2).

2. Remove the lower cowl (page 68 ).

3. Remove the right middle cowl (page 69 ).

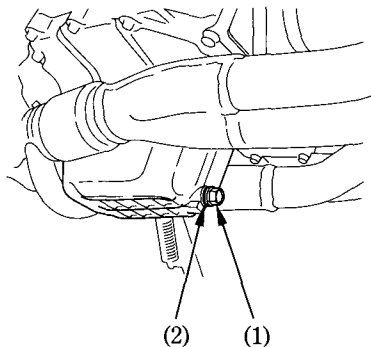

(1) Crankcase drain plug    (2) Sealing washer