


Fuse Box:

The fuse box is located behind the left middle cowl.

The specified fuses are:

10 A, 20 A

1. Loosen the screw (1) and remove the clip A (2).
2. Open the rubber cover (3) and the fuse box cover (4).
3. Pull out the old fuse and install a new fuse. The spare fuses (5) are located in the fuse box.
4. Close the fuse box cover and the rubber cover.
5. Install the clip A and tighten the screw.

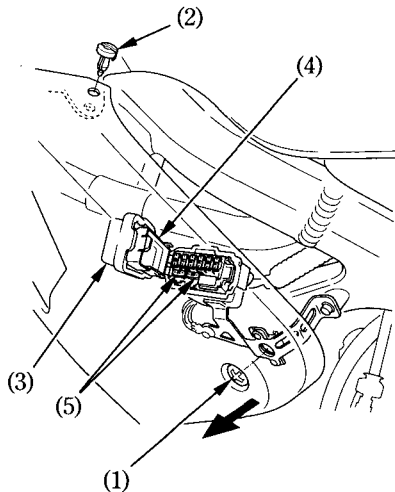

- | | |
|------------------|--------------------|
| (1) Screw | (4) Fuse box cover |
| (2) Clip A | (5) Spare fuses |
| (3) Rubber cover | |