


## Rear seat

To remove the rear seat (1), insert the ignition key (2) into the seat lock (3). Turn it clockwise, then pull the rear seat up and back.

To install the seat, insert the prongs (4) into the seat hook (5) and the guide hooks (6), and then push down on the front of the seat.

Be sure the seat is locked securely in position after installation.

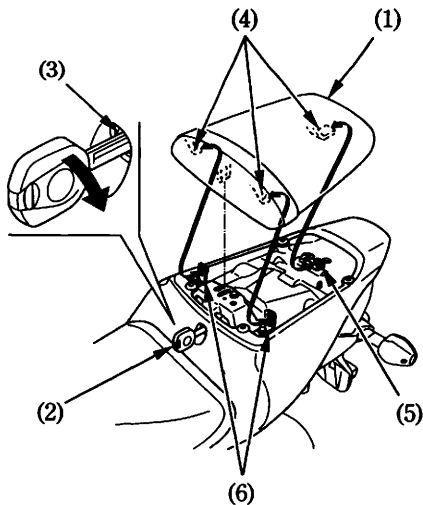

- (1) Rear seat
- (2) Ignition key
- (3) Seat lock

- (4) Prongs
- (5) Seat hook
- (6) Guide hooks