


### Main Fuse:

The main fuse (1) is located under the front seat.

The specified fuse is:

30 A

1. Remove the front seat (page 63 ).
2. Disconnect the wire connector (2) of the starter magnetic switch (3).
3. Pull out the old fuse and install a new fuse. The spare main fuse (4) is located behind the starter magnetic switch.
4. Reconnect the connector and install the front seat.

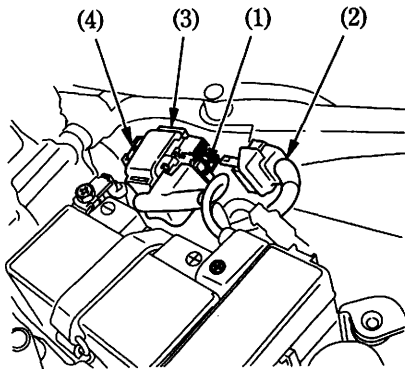

- (1) Main fuse
- (2) Wire connector
- (3) Starter magnetic switch
- (4) Spare main fuse