

| (Ref.No.) Description | Function |
|--|---|
| (12) Neutral indicator (green) | Lights when the transmission is in neutral. Should also light for a few seconds and then go off when the ignition switch is turned ON. |
| (13) High beam indicator (blue) | Lights when the headlight is on high beam. Should also light for a few seconds and then go off when the ignition switch is turned ON. |
| (14) Combined ABS indicator (amber) (CBR600RR ABS) | This indicator normally comes on when the ignition switch is turned ON, and goes off after you ride the motorcycle at speed above 10 km/h (6 mph). If there is a problem with the Combined ABS, this indicator lights or flashes and remains on (page 86). |