


Preparation

Before starting, insert the key, turn the ignition switch ON and confirm the following:

- The transmission is in neutral (neutral indicator is ON).
- The engine stop switch is at  (RUN).
- The low oil pressure indicator is ON.
- The PGM-FI malfunction indicator lamp (MIL) is OFF.
- The high coolant temperature indicator is OFF.
- The HESD indicator is OFF.
- The immobilizer system (HISS) indicator is OFF.
- The Combined ABS indicator is ON.
(CBR600RR ABS)

(CBR600RR ABS)

The Combined ABS indicator should go off after you ride the motorcycle at a speed above 10 km/h (6 mph).

The low oil pressure indicator should go off a few seconds after the engine starts. If the low oil pressure indicator lights during operation, stop the engine immediately and check the engine oil level.

NOTICE

Operating the engine with insufficient oil pressure can cause serious engine damage.