


4. Remove the oil filter (3) with a filter wrench and let the remaining oil drain out. Discard the oil filter.

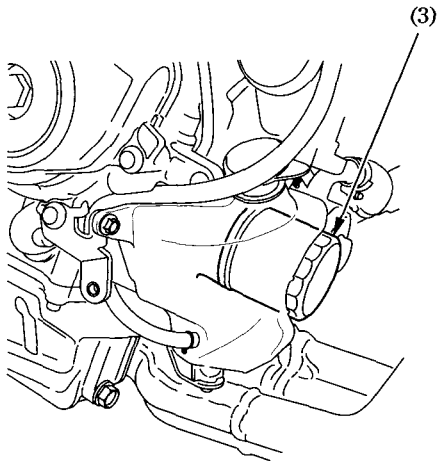

(3) Oil filter