

Other Adjustments ▶ Adjusting the Headlight Aim

## Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment. Turn the pinion using a Phillips screwdriver provided in the tool kit (▶ P. 57) in or out as necessary.

Obey local laws and regulations.

Maintenance

