

BRAKE PAD WEAR

(Refer to the maintenance precautions on page 65).

Brake pad wear will depend upon the severity of usage, type of riding and condition of the roads. The pads (1) will wear faster on dirty and wet roads.

〈Front〉

The pad (1) can be checked for wear by removing the cover (4) from the caliper (2).


〈Rear〉

Inspect the pads visually from under the caliper (2) during all regular service intervals to determine the pad wear.


If either pad wears to the wear line (3), both pads must be replaced as a set.

NOTE:

* Use only genuine Honda replacement friction pads offered by authorized Honda dealers. When brake service is necessary consult your Honda dealer.

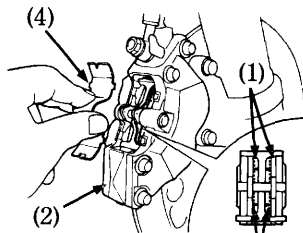

(FRONT) (1) Pads
(2) Caliper
(3) Wear line
(4) Cover

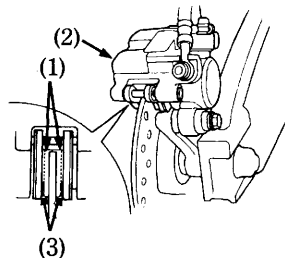

(REAR) (1) Pads
(2) Caliper
(3) Wear line