

| (Ref. No.) Description | Function |
|---|--|
| (4) Immobilizer system (HISS) indicator | This indicator lights for a few seconds when the ignition switch is turned ON and the engine stop switch is at ○ (RUN). It will then go off if the properly-coded key has been inserted. If an improperly-coded key has been inserted, the indicator will remain on and the engine will not start. (page 48) |
| (5) Coolant temperature meter | Shows coolant temperature (page 19). |
| (6) Right turn signal indicator (green) | Flashes when the right turn signal operates. |
| (7) High beam indicator (blue) | Light when the headlight is on high beam. |