

FUEL


Fuel Tank

The fuel tank capacity including the reserve supply is:

18.0 l (4.76 US gal , 3.96 Imp gal)

To open the fuel fill cap (1), insert the ignition key (2) and turn it clockwise. The fuel fill cap is hinged and will lift up.

After refueling, to close the fuel fill cap, push the fuel fill cap into the filler neck until it snaps closed and locks. Remove the key.

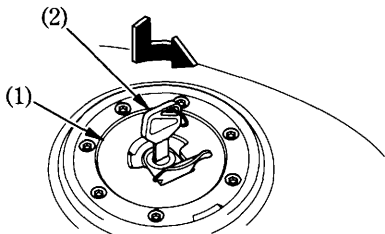

(1) Fuel fill cap

(2) Ignition key

For E, F, ED:

Use unleaded or low-lead petrol with a research octane number of 91 or higher. We recommend that you use unleaded petrol because it produces fewer engine and spark plug deposits and extends the life of exhaust system components.

For G:

Use unleaded petrol with a research octane number of 91 or higher. The use of leaded petrol will cause premature damage to the catalytic converter.

For U, BR:

Use unleaded petrol with a research octane number of 91 or higher.

For MX:

Use unleaded or low-lead petrol with a research octane number of 88 or higher. Recommend – Extra petrol.