


## Digital clock

Shows hour and minute. To adjust the time, proceed as follows:

1. Turn the ignition switch ON.
2. While pressing the right control button (2), simultaneously press the left control button (3). The clock will be set in the adjust mode with the minute display flashing.

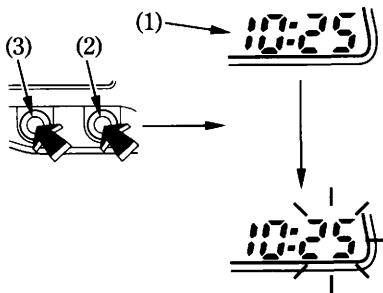

- (1) Digital clock
- (2) Right control button
- (3) Left control button

3. Set hour and minute.

- The clock will alternate between the hour and minute adjust modes each time the left control button is pressed.

