

## FUEL TANK MAINTENANCE POSITION

The front of the fuel tank can be tilted up for maintenance.



The fuel tank does not require draining.

To raise:

1. Remove the front seat (page 62 ).
2. Remove the right and left inner panels (page 67 ).
3. Remove the tank open rod (1) from front seat (2).
4. Raise the front of the fuel tank (3) and place the tank open rod (1) between the front of the fuel tank (3) and steering stem (4).

Do not raise the fuel tank higher than the tank stopper.

Do not remove the rear hinge bolt of fuel tank.

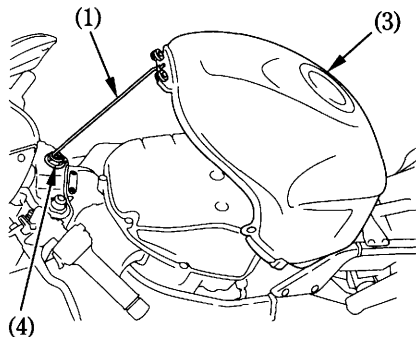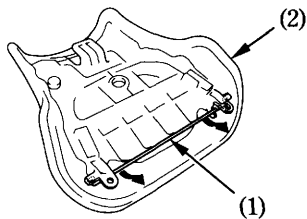

(1) Tank open rod

(2) Front seat

(3) Fuel tank

(4) Steering stem