

<b>(Ref. No.) Description</b>	<b>Function</b>
(7) Coolant temperature gauge	Shows coolant temperature (see page 12).
(8) Right turn signal indicator (green)	Flashes when the right turn signal operates.
(9) High beam indicator (blue)	Lights when the headlight is on high beam.
(10) Side stand indicator (amber)	Lights when the side stand is put down. Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 50) is activated.
(11) Neutral indicator (green)	Lights when the transmission is in neutral.
(12) Tripmeter	Shows mileage per trip.
(13) Tripmeter reset knob	Resets tripmeter to zero ( 0 ). Turn knob in direction shown.