


### Rear seat

To open the rear seat (4) , insert the ignition key (5) into the seat lock (6) and turn it clockwise.

Pull the seat back and up.

To close the rear seat , push down on the rear of the seat.

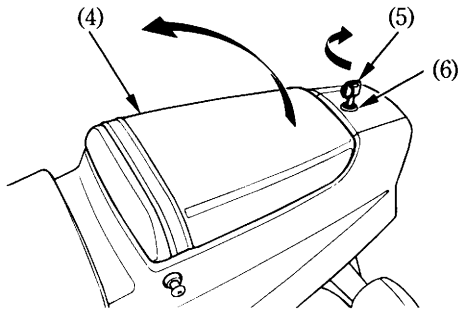

- (4) Rear seat
- (5) Ignition key

- (6) Seat lock