



Microphone switch

The microphone switch (5) is located at the right of the lighting switch. The speaker can be used when the ignition switch is set to the “ON” position and the microphone is plugged into the microphone jack (6).

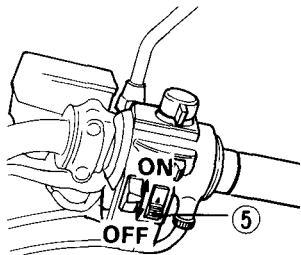

(5) Microphone switch

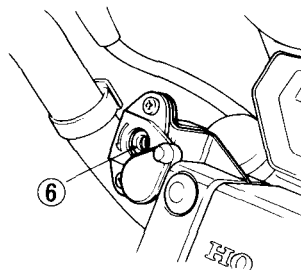

(6) Microphone jack