

IDLE SPEED

(Refer to the maintenance precaution on page 56).

The idle speed adjustment procedure given here should only be used when changes in altitude affect *normal* idle speed as set by your dealer. See your Honda dealer for regularly scheduled carburetor adjustments, including individual carburetor adjustment and synchronization.

NOTE:


* Do not attempt to compensate for faults in other systems by adjusting idle speed. See your Honda dealer for regularly scheduled carburetor adjustments, including individual carburetor adjustment and synchronization.

1. Warm up the engine, and shift to neutral.
2. Adjust idle speed with the throttle stop screw (1).

Idle Speed: (In neutral)

$1,000 \pm 100 \text{ min}^{-1}$ (rpm) Except Thailand

$1,100 \pm 100 \text{ min}^{-1}$ (rpm) Thailand only

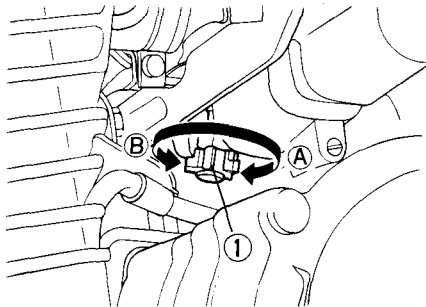

(1) Throttle stop screw

(A) Increase

(B) Decrease