

## FUSE REPLACEMENT

(Refer to maintenance precautions on page 56). The main fuse (1), located on the starter magnetic switch behind the right side cover, is 30 A.

The spare main fuse (2) is located under the starter magnetic switch.

The fuse box is located between the handlebars. Spare fuses (5) are located in the fuse box.

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your Honda dealer for repair.


### CAUTION:

\* **Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

### ▲ WARNING

\* **Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power.**

To replace the main fuse (1), remove the right side cover, disconnect the wire connector (3) of the stator magnetic switch and pull out the old fuse. Install a new fuse and reconnect the connector.

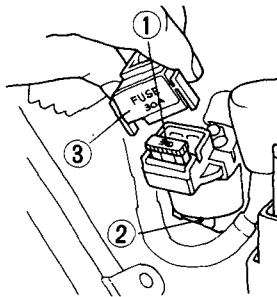

(1) Main fuse    (3) Wire connector  
(2) Spare main fuse